

# LYE3125LXP3



ELECTROZEMPER S.A. Avda. de la Ciencia s/n.
Parque Ind. Avanzado
13005 Ciudad Real. Spain.
Tel.: +34 902 11 11 97
Fax: +34 902 11 11 97
on fo@zemper.com


# **EXITALYA WITH DOWNLIGHT**

#### Graphic reference

**Datasheet** 



### Dimensions

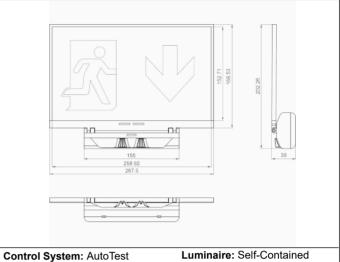

Standards: EN-60598-1, EN-60598-2-22, EN-62034 Certification: CE, ENEC, **CIVIL DEFENSE** 







Supply: 230V 50Hz<3.3W

Maintained mode consumption: 3,3 W Non-maintained mode consumption: 2,5 W

Working temperature: 0-40°C Emergency lamp: 25xLED 0.5W Emergency lumen output: 120 lm Maintained lumen output: 70 lm Battery: 3.2V-3.0Ah LFP

Class: II Mode: -

Power factor: - % Signaling Luminaire: -LED temperature: 4000°K

Duration: 3 h Remote control: Yes Charging time: 12 h

#### **Mechanical characteristics**

Housing: Polycarbonate Diffuser: Antipanic Lens

Suitable for flammable surfaces: Yes


IP/IK: IP42/IK04

Finish: White RAL9003

Weight: 0,45KG

#### ATEX Envelope:

#### **Photometric curve**

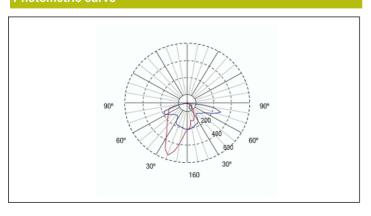

#### Interdistance

Installation height		
2,0 m	8,12 m	5,92 m
2,5 m	7,75 m	6,33 m
3,0 m	7,10 m	6,58 m
3,5 m	6,32 m	6,73 m



## LYE3125LXP3



ELECTROZEMPER S.A.
Avda. de la Ciencia s/n.
Parque Ind. Avanzado
13005 Ciudad Real. Spain.
Tel.: +34 902 11 11 97
Fax: +34 902 11 11 97
in fo @ z e m p e r . c o m

# Datasheet EXITALYA WITH DOWNLIGHT

#### Installation characteristics

Maintained luminaires use 4 terminals (2xL + 2xN).

Luminaires have a selector bridge to enable / disable the maintained mode. (lens lighting).

Installation with mounting plate.

Possibility of installation in:

Wall surface.

Possibility of connection with:

Surface tube wiring.

Vision distance: 25 m

#### **Operating characteristics**

The luminaire has status LEDs, which indicates:

Status of the battery charging circuit.

Battery status (duration)

Emergency status function.

Test status.

Microprocessor controlled luminaire that performs periodic and automatic tests.

Functional test every 7 days.

Duration test every 365 days.

The test result is shown in the status indicator LEDs.

Remote control input that allows:

Put on Standby without power supply.

Restart in emergency status without power supply.

Switch on in emergency status (more than 24 h of charge)

Manual and remote duration test. (more than 24 hours of charge).

Date and time programming of the tests.

Reset of the luminaire status.

General Envelope data	