

LYE5120LWP3




ELECTROZEMPER S.A. Avda. de la Ciencia s/n.
Parque Ind. Avanzado
13005 Ciudad Real. Spain.
Tel.: +34 902 11 11 97
Fax: +34 902 11 11 97
info@zemper.com

Datasheet **EXITALYA MAXI** with Downlight

Graphic reference



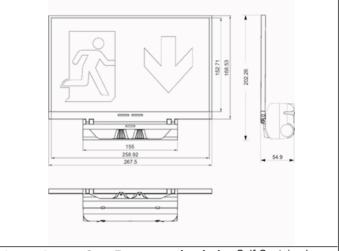

Luminaire: Self-Contained Control System: SmartZ

Standards: EN-60598-1, EN-60598-2-22, EN-62034, ETSI EN 303 446-1 V1.2.1

Certification: CE



Supply: 230V 50Hz<3.3W

Maintained mode consumption: 3,3 $\ensuremath{\text{W}}$ Non-maintained mode consumption: 2,5 W

Working temperature: 0-40°C Emergency lamp: 25xLED 0.5W Emergency lumen output: 120 lm Maintained lumen output: 70 lm

Battery: 3.2V-3.0Ah LFP

Class: II Mode: -

Power factor: - % Signaling Luminaire: -LED temperature: 6500°K

Duration: 3 h Remote control: No Charging time: 12 h

Mechanical characteristics

Housing: Polycarbonate Diffuser: Antipanic Lens

Suitable for flammable surfaces: Yes


IP/IK: IP42/IK04

Finish: White RAL9003

Weight: 0,45KG

ATEX Envelope:

Photometric curve

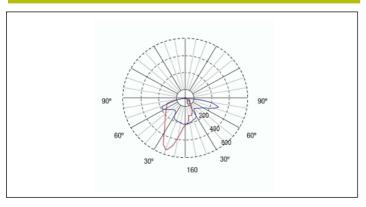

Interdistance

Installation height		
2,0 m	8,12 m	5,92 m
2,5 m	7,75 m	6,33 m
3,0 m	7,10 m	6,58 m
3,5 m	6,32 m	6,73 m



LYE5120LWP3



ELECTROZEMPER S.A.
Avda. de la Ciencia s/n.
Parque Ind. Avanzado
13005 Ciudad Real. Spain.
Tel:: +34 902 11 11 97
Fax: +34 902 11 11 97
fax: em per.com
w w w.zemper.com

Datasheet EXITALYA MAXI with Downlight

Installation characteristics

Maintained luminaires use 4 terminals (2xL + 2xN).

Luminaires have a selector bridge to enable / disable the maintained mode. (lens lighting).

Installation with mounting plate.

Possibility of installation in:

Wall surface.

Possibility of connection with:

Surface tube wiring.

Vision distance: 25 m

Operating characteristics

The luminaire has status LEDs, which indicates:

Status of the battery charging circuit.

Battery status (duration)

Emergency status function.

Test status.

Microprocessor controlled luminaire

The luminaire can be connected to a control unit.

When the luminaire is installed without a control unit, it performs periodic and automatic tests.

Functional test every 7 days.

Duration test every 365 days.

The test result is shown in the status indicator LEDs.

Wireless communication that allows: Communication with Control unit by wireless communication with a 2.4Ghz frequency system.

Gene	rai Elivelope data			